



Allmendstrasse 6 CH-8320 Fehraltorf Tel. +41 43 204 01 01 sales@exista.ch Fax +41 43 204 01 02 www.exista.ch

VER : A_9 update : 2021.04.01

120 Watts

AC-DC Medical Switching Power Supply

MQF120E SERIES

KEY FEATURES

- Enclosed Medical Switching Power Supply
- Cooling by Free Air Convection
- 85 Watts and 120 Watt with 10CFM Forced Air
- 4000VAC Input to Output 2MOPP Insulation
- High Efficiency up to 91%
- With P.F.C. Function >0.9
- <0.3W No Load Input Power</p>
- EMI for Both Class I (with PE) and Class II (without PE) Configuration
- Suitable for BF Application with Appropriate System Consideration
- UL / IEC / EN 60601 3.1 Edition Safety Approvals
- 3-Year Product Warranty





ELECTRICAL SPECIFICATIONS

All specifications valid at normal input voltage, full load and +25°C after warm-up time unless otherwise stated.

Model No.	· · · · · ·	MQF120E-12S	MQF120E-24S	MQF120E-48S	
Max Output W	/attage (with 10CFM FAN) (W)	120 W			
Max Output W	/attage (Free air Convection) (W)	85 W			
Input	Voltage (Note 3)	90-264 VAC			
	Frequency (Hz)	47-63 Hz			
	Current (Full load)	< 2.0 A max. (115 VAC) / < 1.0 A max. (230 VAC)			
	Inrush Current (<2ms)	< 40 A max. (115 VAC) / < 70 A max. (230 VAC)			
	Leakage Current	< 0.1mA / 264 VAC (Touch Current)			
	Power Factor (at 230 VAC)	PF>0.9 at Full Load			
	No Load	< 0.3W (115 / 230 VAC)			
	Voltage (V.DC.)	12V	24V	48V	
	Voltage Adj Range (V.DC.)	±10% Output Voltage			
	Voltage Accuracy	±2%			
	Current (with 10CFM FAN) (A) max	10	5	2.5	
Output	Current (Free air Convection) (A) max	7.083	3.542	1.771	
	Line Regulation	±1%			
	Load Regulation (10-100%)	±1%			
	Minimum Load	0%			
	Maximum Capacitive Load	3000µF	1500µF	500µF	
	Ripple & Noise (max.) (Note 1)	160mV	1% Vout		
	Efficiency (at 230VAC)	90%	90%	91%	
	Hold-up Time (at 115 VAC) (Note 2)	10 ms min.			
Protection	Over Power Protection	Auto recovery, Hiccup mode			
	Over Voltage Protection	Latch off			
	Over Temperature Protection	Latch off			
	Short Circuit Protection	Protection level 1 (nominal) : Continuous, Auto recovery			
		Protection level 2 (instantaneous high current) : Latch			
Isolation	Input-Output	4000VAC or 5656VDC			
	Input-FG	2000VAC or 2828VDC			
	Output-FG	1500VAC or 2121VDC			





Allmendstrasse 6 CH-8320 Fehraltorf Tel. +41 43 204 01 01 sales@exista.ch Fax +41 43 204 01 02 www.exista.ch

VER : A_9 update : 2021.04.01

AC-DC Medical Switching Power Supply

MQF120E SERIES

120 Watts

ELECTRICAL SPECIFICATIONS

All specifications valid at normal input voltage, full load and +25°C after warm-up time unless otherwise stated.

Model No.		MQF120E-12S	MQF120E-24S	MQF120E-48S			
Environment	Operating Temperature		-30°C+70°C (with derating)				
	Storage Temperature		-30°C+85°C				
	Temperature Coefficient		±0.05%/°C				
	Altitude During Operation		5000m				
	Humidity		20~90% RH				
	Atmospheric Pressure		56 kPa to 106 kPa				
	MTBF		>250,000 h @ 25°C (MIL-HDBK-217F, Notice 1)				
	Vibration		IEC60068-2-6 (10~500Hz, 2G 10min./1cycle, 60min. each along X, Y, Z axes)				
	Shock		IEC60068-2-27				
Physical	Dimensions (L x W x H)		3.15 x 2.35 x 1.7 Inches (80.0 x 59.7 x 43.2) Tolerance ±0.5 mm				
	Weight		258 g				
Safety	Approval		UL / IEC / EN 60601 3.1 rd Edition (2 x MOPP)				
EMC	Conducted EMI	(Note 5)	EN55011 Conducted Clas	is B			
	Radiated EMI	(Note 5)	EN55011 Class I class B / Class II class A				
	EMS		EN60601-1-2 4th edition				

NOTE


1. Ripple & Noise are measured at 20MHz of bandwidth with 0.1uF & 47uF parallel capacitor.

- 2. Hold-up Time measured at 90% Vout.
- 3. Please check the derating curve for more details.
- 4. Strongly recommend to conduct this test with AC Voltage. If customer wishes to test with DC Voltage, please disconnect all Y-Capacitors from Arch power supply.
- 5. Please secure the power supply unit to your metal case by using the four screw holes in the corners for either Class I or Class II equipment
- 6. CAUTION: Double pole, neutral fusing. Disconnect mains before servicing.

(ATTENTION : 2 poles avec fusible sur le neutre. Deconnecter le secteur avant intervention.)

DERATING

If the input voltage is below 99VAC, the product can be used only in an environment where temperature is higher than -10 degrees Celsius.

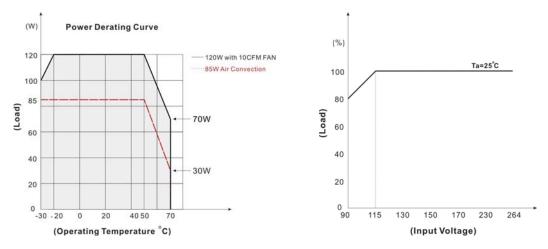





Allmendstrasse 6 CH-8320 Fehraltorf Tel. +41 43 204 01 01 sales@exista.ch Fax +41 43 204 01 02 www.exista.ch


VER : A_9 update : 2021.04.01


120 Watts

AC-DC Medical Switching Power Supply


MQF120E SERIES

MECHANICAL DIMENSIONS (Top View)

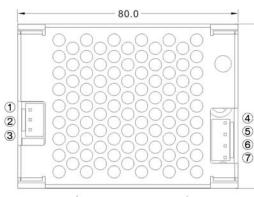

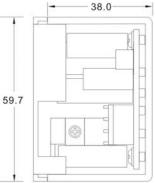


Tolerance ±0.5 mm

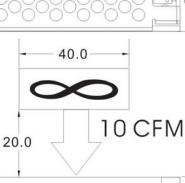

43.2


38.0

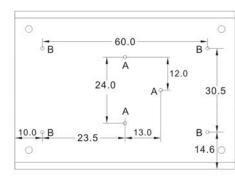

A= For fixture to chassis only A=M3x0.5P B=For fixture to pcb/chassis only B=M3x0.5P Torque:3±0.5 Kgf.cm

ASSEMBLY INSTRUCTIONS

*U Case T=1.5mm Customer is advised to screw into the threads no more than 1.5mm

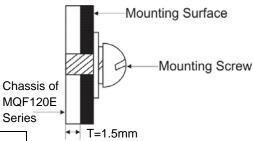

Brands		Alex		JST	
PIN#	Single	Mating Housing	Terminal	Mating Housing	Terminal
1	AC IN (N)	9396-3	96T series	VHR-3N	SVH-41T-P1.1
2	NO PIN				
3	AC IN (L)				
4~5	+DC OUT	9396-4	96T series	VHR-4N	SVH-41T-P1.1
6~7	-DC OUT	9390-4			
8	PE				

BLOCK DIAGRAM

(CASE)

